

How to attach crop protectors

WoodBlocX crop protectors are Ø16mm hollow steel rods with a natural rust finish which are used to create height-adjustable netted growing areas in our raised beds.

They should be installed in every corner of your raised bed and are easily attached on the inside to the finishing capping layer. For raised beds over 2.25m in length, we recommend additional crop protectors to be installed at each support buttress.

Each rod is 1.2 m tall with a 4 cm diameter sphere on top. Fixing brackets, adjustable collars and screws are included. Unfortunately, we **DO NOT** supply netting or coverings.

You can choose to include crop protectors with your order. Our system automatically calculates how many your design requires or if you prefer, you can add them individually.

[Contact us](#) if you have any questions or require support.



Defend your patch from invaders!




**WOOD
BlocX**

Start a [Live Chat](#) | woodblocx.co.uk


Crop protector fixing pack

1 x

=

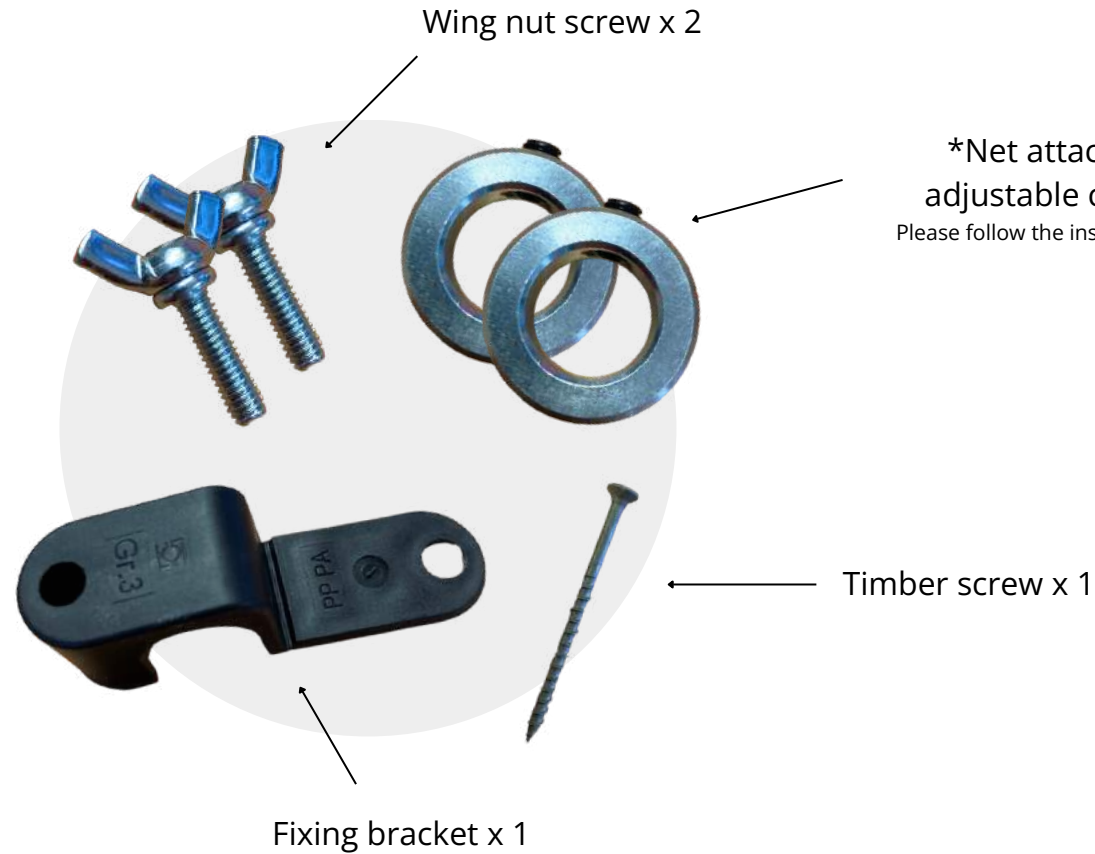

*NET ATTACHMENT ADJUSTABLE COLLAR - YOU MUST UNSCREW THE SMALL BLACK THREAD AND INSERT THE WING NUT SCREW

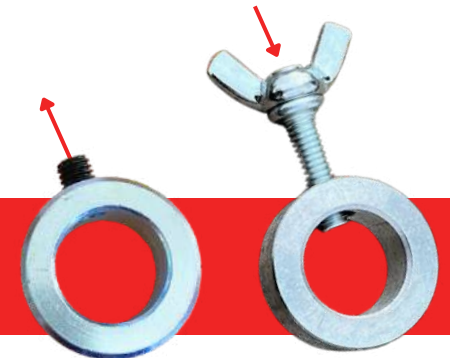





Traditional & Modern capping styles - follow the same crop protector attachment method



Fold the fixing bracket - bend the plastic in half along the scored line as demonstrated in the pictures.

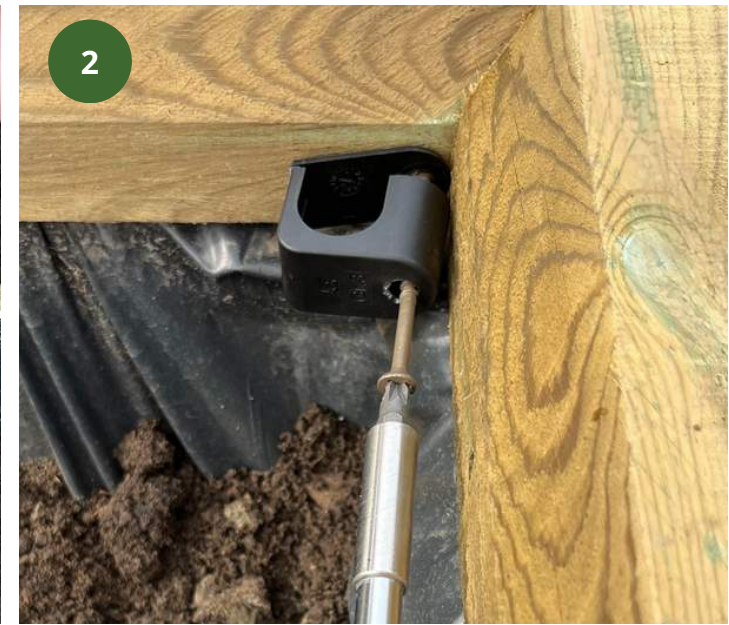

Screw the bracket into the capping - attach the fixing bracket to the inside corner of your WoodBlocX capping.

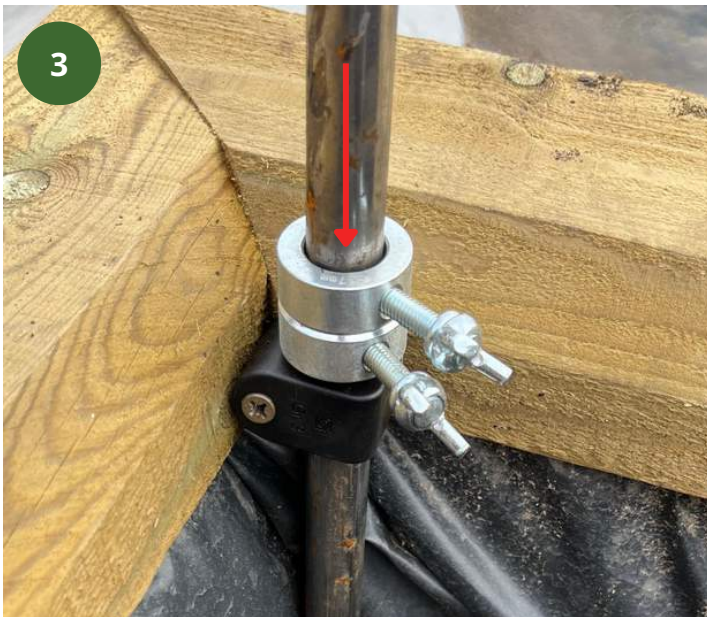

Slide through the crop protector - from the top, guide the rod through the fixing bracket and BOTH adjustable collars.



Separate the collars & attach netting - wrap your protective netting around the wing nut screws and tighten the adjustable collars at the top and bottom.



Raise collar up & down - use the bottom wing nut screw to raise or lower your raised bed netting. **JOB DONE!**